


**SHAKE WELL
BEFORE USE**

EASIHOLD

MULCH & ROCK BINDER

5L/169oz

 @EASIHOLD
#EASIHOLD

Instruction Guide for Both Methods

SPRAY METHOD

We recommend the spray method for smaller spaces, such as small flower beds, plant pot topping and perimeter decor. You can also use it for the 'harder to reach' areas and finishing details to a larger project.

STEP 1: SHAKE & PREPARE

5L/169oz



Shake bottle well and pour EASIHOLD into your sprayer. We recommend using an Airless Sprayer.

STEP 2: SPRAY COAT 1

Spraying slowly and controlled to your clean and dry surface, ensuring an even coverage – Remember, **LESS IS MORE** with EASIHOLD. **Do not to oversaturate!**



STEP 3: RAKE/TURN



After applying the first coat, rake/turn the rocks or mulch to expose the uncoated material.

STEP 4: APPLY COAT 2 & COMPACT

Follow the same method as Step 2 for second coat. Once an even coverage has been achieved, **compact** your surface using a trowel or a large, flat piece of wood for best binding results.



LEAVE TO DRY FOR 12-36 HOURS



STEP 5: SPRAY COAT 3



Once the first two coats are dry, apply the third and final topcoat to your surface. **NO NEED TO TURN.** Leave to dry for 12-36 hours in warm, dry conditions.

MIX METHOD

Mix method is recommended for larger landscaping projects, larger flower beds, inbetween stepping stones and big gravelled areas.

STEP 1: MIX

Pour EASIHOLD in a mixing bucket with your rocks or mulch at a ratio of 1-part EASIHOLD to 25-parts rocks/mulch by volume (**refer to measurement table on reverse**). Mix until material is coated evenly.



STEP 2: POUR & SPREAD



Pour out your EASIHOLD mix to the desired area and spread at a depth of around **20mm/4/5"** ensuring this is overlaying a permeable surface to allow for full drainage.

STEP 3: COMPACT

Compact the stones using a trowel and/or a large piece of wood, a flattened compacted surface will produce the best binding results.




LEAVE TO DRY FOR 12-36 HOURS



TOP TIPS

Once dry, apply a light topcoat using a sprayer or pouring EASIHOLD with an even, controlled distribution and allow to dry for a further 12-36 hours.

Warm and dry weather should be expected for the coming 2-3 days.

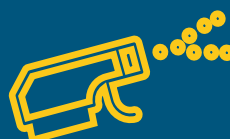

Flushing your sprayer with warm water after each coat will reduce the risk of blockages.

IMPORTANT: Apply to light foot traffic and decorative areas only. EASIHOLD is **NOT** suitable for driveways, underneath furniture or areas with heavy foot traffic. For these projects we recommend our DIY Resin Bound Kits.